Povezivanje SpeedTouch 536/546 ADSL rutera putem LAN-a

Pre nego što krenete u podešavanje vašeg ADSL rutera, proverite da li ste ispravno povezali vaš računar i ADSL ruter. Ukoliko postoji veza između računara i ADSL rutera, *Ethernet* lampica na ruteru će svetleti zelenom bojom.

ADSL ruter se nalazi na IP adresi 192.168.1.254. Da bi ste pristupili ADSL ruteru, potrebno je da podesite par parametara u *Local Area Connection*-u mrežne kartice na koju ste povezali ruter. Kliknite desnim dugmetom miša na ikonicu i iz poneđenog menija odaberite *Properties*. U *This connection uses following items* nađite **Internet protocol** i kliknite na dugme *Properties*. Odaberite opcije *Obtain an IP address automatically* i *Obtain DNS server address automatically*. Kliknite na dugme *OK* a zatim se vratite na *Local Area Connection properties* prozor. Kliknite na *OK* da zatvorite prozor.

) Ob	tain an IP address a	utomatically			
OUs	e the following IP ad	Idress:			
IP ac				- 19 - 1	
	et mask:				
Defa	ult gateway:				_
a ot	tain DNS server add	lress automati	icallv		
DUs	the following DNS	server addres	sses:		
Prefe	rred DNS server.				

Ukoliko je sve podešeno kako treba, otvorite vaš web browser i ukucajte adresu

http://192.168.1.254. Nakon što se otvori administarivni interface, kliknite na dugme *SpeedTouch* u meniju sa leve strane.







U sekciji Pick a task odaberite Set Up.



Nakon kraćeg učitavanja, dobićete uvodni prozor SpeedTouch Easy Setup-a. Klinite na dugme Next.



U Select a service odaberite Routed PPP i kliknite na dugme Next.

Service Selection You need to select the s	ervice you want to connect to.	
Select the service of your DS	SL account. Click Next to continue.	
Select a service:	Routed PPP Bridge	
Description of selected se DESCRIPTION REGION PROVIDER	ervice: Routed Connection. World Basic	
speed touch [™]	<back next=""></back>	Cancel



Za VPI/VCI odaberite 8.35, a za Connection Type stavite PPP over Ethernet.

Routed Interne Specify the det be provided by	t Connection ails of the Internet connection your ISP.	on. All information should	
VPI/VCI	8.35 💌 Choose a VPI/VCI from th	e list	
Connection Type	O PPP over ATM (PPPoA O PPP over Ethernet (PP) PoE)	
speed to u	JCh	<back next=""></back>	Cancel
Done			

Upišite vaš username i password.

user manne	
	Enter your Internet connection user name.
Password	Andread Contract of Contract o
1 335 001 3	Enter your Internet connection password.
Confirm Password	
	Re-enter your password.

Ukoliko želite, upišite password kojim zaštićujete podešavanja rutera.

Access Control Specify user na SpeedTouch ma	me and password to preven anagement interface.	t unwanted access to the	
User Name	Administrator		
oser Marrie	Enter a user name.		
Password			
	Enter a password.		
Confirm Password			
	ke-enter the password.		
speedtou	ichĭ	<back next=""> (</back>	Cancel
Done			



Kliknite na dugme Start da bi ste snimili konfiguraciju.

view or chan	ige settings, cliq	k Back. Click Start to start	configuration.
ttings:			
Device	:		
	Name	SpeedTouch 5x6	
	Serial #	0601DT1WH	
Doutoo	Configurat	ion -	
Device	Region	World	
	Provider	Basic	
	Service	Routed PPP	
	Descriptio	on Routed Connection	-
			*

Sačekajte dok se snimi konfiguracija vašeg rutera.



Kliknite na dugme Finish da bi ste zatvorili Easy Setup.

